

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 47


### Fuse Box Fuses

1. Remove the seat. ► P. 57
2. Open the fuse box covers.
3. Pull out the fuses one by one to check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
  - Spare fuses are provided near the battery.
4. Close the fuse box covers.
5. Reinstall the seat.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

#### GROM125

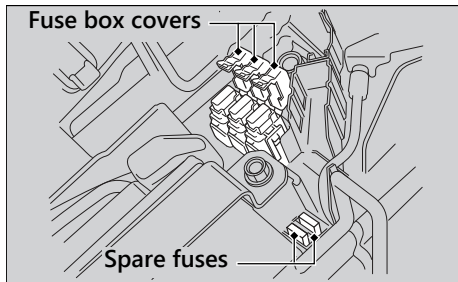

#### GROM125A

