


Driver Controls


Shift Lever

Your Honda MUV is equipped with an automatic transmission. The shift lever, located to the right of the steering wheel, has three positions: drive (D), neutral (N), and reverse (R).

shift lever

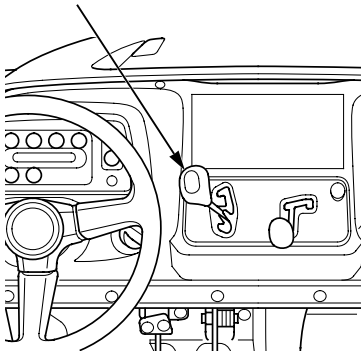

shift positions

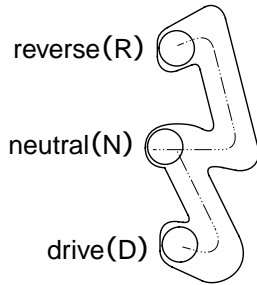

You should move the shift lever only when the vehicle is stopped with your foot on the brake pedal and with the engine idling. Use a firm motion to select the appropriate gear. Have your vehicle checked by a Honda dealer if you experience any shifting problems.

NOTICE

Do not attempt to shift the shift lever with engine speed above idle or while the vehicle is moving, as you may damage the transmission.