

Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on page 77.

Check the engine oil level each day before operating your Honda MUV and add, if needed.

1. Park your Honda MUV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3—5 minutes. Stop the engine and wait 2—3 minutes.
3. Remove the left seat (page 91) and rubber dust cover.
4. Remove the dipstick from the front crankcase cover and wipe it clean.
5. Insert the dipstick without screwing it in, then remove the dipstick and check the oil level. The oil level should be between the upper level mark and the lower level mark on the dipstick.

UNDER LEFT SEAT

