

Engine Oil & Filter

16. Install the under panel by tightening the screws C.
17. Install the right seat mount pipe, collar A, collars B and tighten the bolt A and bolts B to the specified torque:
 - bolt A
16 lbf·ft (22 N·m , 2.2 kgf·m)
 - bolts B
20 lbf·ft (27 N·m , 2.8 kgf·m)
18. Install the center panel by tightening the screws B and screws A.
19. Install the right seat.
20. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 170).

NOTICE

Improper disposal of drained fluids is harmful to the environment.