

# Doors

If the doors are shaky when closed, turn the door stopper counterclockwise to adjust the doors. Each door has a double latching mechanism. Adjust the door stoppers, so that it latches on the second click.

The left and right doors can be adjusted in the same manner.

## Adjust

1. Open the door (page 30).
2. Turn the door stopper counterclockwise.
3. Make sure the door is closed securely until the second latch click is heard.

