

Doors

If the doors are shaky when closed, turn the door stopper counterclockwise to adjust the doors. Each door has a double latching mechanism. Adjust the door stoppers, so that it latches on the second click.

The left and right doors can be adjusted in the same manner.

Adjust

1. Open the door ([page 30](#)).
2. Turn the door stopper counterclockwise.
3. Make sure the door is closed securely until the second latch click is heard.

