

Is Your Vehicle Ready to Drive?

- Driveshafts* Inspect the driveshafts and boots for damage, tears, or leaks. If any tears are found, see your dealer.
- Steering gearbox and boots* Check the steering to make sure it turns smoothly in both directions. Check for any tears in the boots. If any tears are found, see your dealer.
- Underbody* If the vehicle was last driven in deep grass or a brushy area, look for and remove any debris. Check for any visible dents or cracks. If any dents or cracks are found, see your dealer.
- Air Cleaner* Inspect the air cleaner element ([page 119](#)) to insure it is clean and evenly oiled.
- Air Cleaner Housing Drain Tube* Check for deposits in the drain tube. If necessary, clean the tube ([page 122](#)) and check the air cleaner housing.
- Suspension* Check the condition of all suspension components. Be sure to look for bends or oil leaks in the cushion damper.
- Lights* Make sure the headlights, taillights, and brake lights are working properly.
- Controls* Check that all driving controls, including the accelerator pedal, brake pedal, parking brake lever, drive mode select lever, and the shift lever are operating smoothly.
- Exhaust System* Make sure no flammable materials or debris are sticking to the exhaust system. If any flammable materials or debris is found, remove it. Start the engine and listen for any exhaust leaks.

(cont'd)