

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).															
FREQUENCY (Whichever comes first)		Initial maintenance	Regular maintenance interval						Note	Refer to page					
		× 100 mi	1	6	12	18	24	30			36				
ITEMS		× 100 km	1.5	10	20	30	40	50	60						
		Hours	20	100	200	300	400	500	600						
		Month	1	12											
Check engine oil and coolant		Check oil and coolant at fuel stop								101,114					
Check tires		Check inflation and condition once a month								147					
Check side net and snap hooks		●	●	●	●	●	●	●		32					
Check brake fluid		Check fluid level once a month								139					
Replace engine oil and oil filter		●	●	●	●	●	●	●		103					
*	Inspect valve clearance	●	Every 600 miles (1,000 km) or 100 operating hours, otherwise adjust only if noisy								—				
*	Clean spark arrester		Every 600 miles (1,000 km) or 100 operating hours, whichever comes first								133				
	Clean air cleaner elements													1	119
	Check air cleaner housing drain tube													2	122
	Check spark plug														130
*	Inspect idle speed	●								—					
*	Check fuel lines and connections			●			●			—					
	Check front and rear brakes	●			●			●	3	138					
	Check front and rear differential oil	●			●			●		109,111					

- * Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual ([page 214](#)).

Note 1 Service more frequently when operating in dusty areas, sand or snow.

Note 2 Service more frequently when operated in muddy, very wet conditions, or freezing temperatures.

Note 3 Service more frequently when operated in muddy conditions.