

Engine Oil & Filter

Changing Engine Oil & Filter

Refer to *Safety Precautions* on [page 79](#).

Your Honda MUV's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter specified for your model or a filter of equal quality.

NOTICE


Using the wrong oil filter may result in leaks, premature wear, or engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench, and access from underneath the vehicle, as well as the means for disposing of the drained fluid ([page 174](#)). If you do not have the skills or the tools, see your dealer.

Drain the Engine Oil:

1. Make sure the Honda MUV is parked on level ground. Set the parking brake, and jack up and support your Honda MUV ([page 94](#)).
2. Remove the seat ([page 93](#)) and rubber dust cover.
3. Remove the oil fill cap.

UNDER SEAT LEFT SIDE

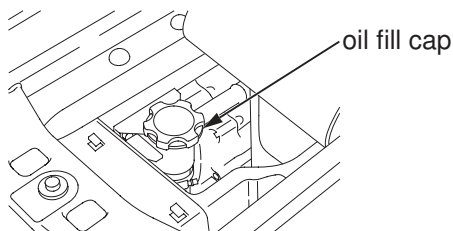

(cont'd)