

# Coolant

---

Increasing the concentration of antifreeze is not recommended because it decreases cooling system performance. Higher concentrations of antifreeze (up to 60%) should only be used to provide additional protection against freezing. Check the cooling system frequently during freezing weather.

## Checking & Adding Coolant

Refer to *Safety Precautions* on [page 79](#).

Check the engine coolant level every day before operating your Honda MUV and add, if needed.

1. Make sure the vehicle is parked on a firm, level surface.
2. Open the front hood ([page 92](#)).
3. With the engine at normal operating temperature, check the coolant level in the reserve tank. It should be between the MAX and MIN level marks.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your dealer for repair.

**UNDER FRONT HOOD  
RIGHT FRONT**

