

Radiator Core

Refer to *Safety Precautions* on [page 79](#).

Check the air passages for clogging or damage. Remove insects, mud, or any obstruction with low water pressure. Have the radiator checked by your dealer if more than 20% of the radiator surface air flow is restricted.

Clean the radiator core after driving your Honda MUV in mud.

To clean the radiator core:

1. Open the front hood ([page 92](#)).
2. Wash the radiator core with low water pressure.

NOTICE

Do not apply high pressure water directly to the radiator core. High pressure water can damage the radiator core fins.