


Air Cleaner

Cleaning

1. Lift the cargo bed ([page 46](#)).
2. Unlatch the retainer clips.
3. Remove the air cleaner housing cover.

UNDER CARGO BED

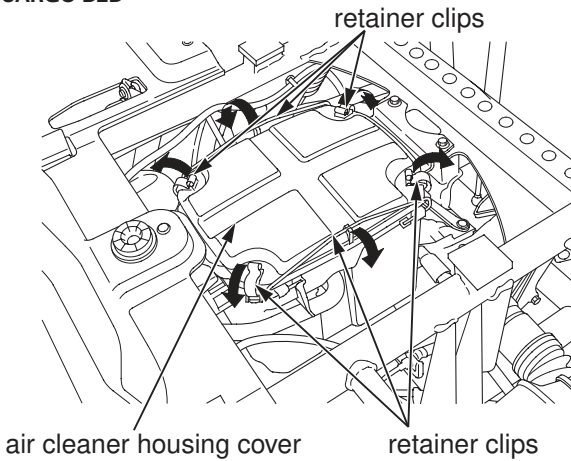

(cont'd)