

Air Cleaner

Air Cleaner Housing Drain Tube

The air cleaner housing drain tube should be serviced in accordance with the Maintenance Schedule. (Driving through water may require more frequent inspection.) If deposits can be seen in the drain tube, the tube must be cleaned before starting the vehicle.

1. Lift the cargo bed ([page 46](#)).
2. Remove the air cleaner housing drain tube by removing the clip under the air cleaner housing.
3. Drain the deposits.
4. Reinstall the air cleaner housing drain tube, securing it with the clip.
5. Lower the cargo bed ([page 47](#)).

RIGHT REAR

