


Lubrication

Lubricate the cargo bed strikers as shown in the following illustration.
Lift the cargo bed ([page 46](#)).

UNDER CARGO BED RIGHT SIDE

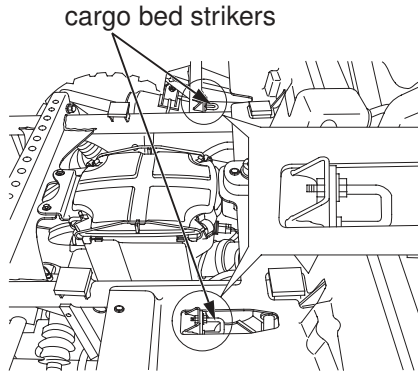

Lubricate the tailgate pivots as shown in following illustration.
Open the tailgate ([page 45](#)).

