

Tire Rotation

Refer to *Safety Precautions* on [page 79](#).

This procedure requires mechanical skill and professional tools such as a torque wrench. If you do not have the skills or the tools, see your dealer.

Jack up and support the Honda MUV ([page 94](#)).

To help increase tire life and distribute wear more evenly, rotate the tires according to the Maintenance Schedule. Because of the tires have rotating direction, move the tires to the positions shown in the chart when they are rotated. Do not rotate the tires from side to side.

After rotate tires, tire air pressures need to be adjusted ([page 147](#)).

