
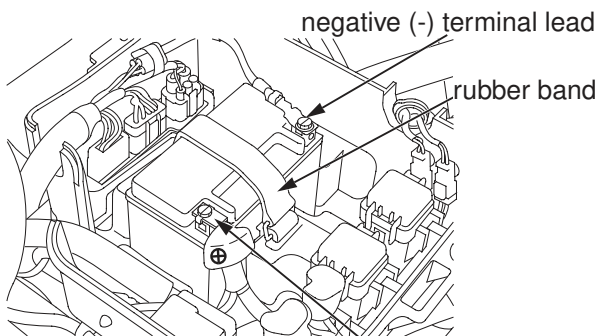


Battery

The battery is located under the front hood.

UNDER FRONT HOOD

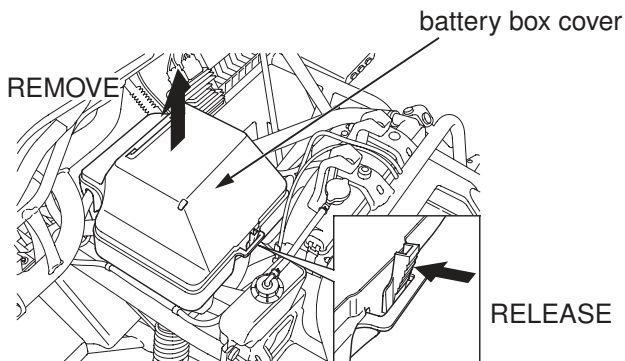

Removal

1. Make sure the ignition switch is OFF (O).
2. Open the front hood ([page 92](#)).
3. Remove the battery box cover.
4. Release the rings and remove the rubber band.
5. Disconnect the negative (—) terminal lead from the battery first, then disconnect the positive (+) terminal lead.