

Storing Your Honda

Removal from Storage

Refer to *Safety Precautions* on [page 79](#).

1. Uncover and clean your Honda MUV.
2. If your Honda MUV has been stored for more than four months—change the engine oil ([page 103](#)).
3. If your Honda MUV has been stored for more than two months—ask your dealer to drain and replace the fuel.
4. Charge the battery ([page 160](#)) as required. Install the battery.
5. Perform a pre-drive inspection ([page 54](#)), then test-drive your Honda MUV at low speeds.