

# If the Battery Is Low

---

If the battery is low, the starter motor doesn't operate or works poorly, and you can't start the engine.

Jump starting your Honda MUV should be avoided.

Instead, the battery should be removed and recharged ([page 160](#)).

If you can't charge the battery or it appears unable to hold a charge, contact your dealer.

## **WARNING**

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery maintenance.

**WARNING :** Battery posts, terminals and related accessories contain lead and lead compounds. **Wash your hands after handling.**

However, when there is no option other than jump starting, follow the instructions given below.

### **NOTICE**

*If a battery sits in extreme cold, the electrolyte inside can freeze. Attempting to jump start with a frozen battery can cause it to rupture.*

Use a battery that is the same as the one in the vehicle or an equivalent.