

# Maintenance Schedule

Items	Pre-ride Check ➔ P. 35	Frequency *1											Annual Check	Regular Replace	Refer to page	
		x 1,000 km	1	6	12	18	24	30	36							
		x 1,000 mi	0.6	4	8	12	16	20	24							
Fuel Line			I	I	I	I	I	I	I	I	I	I	I			-
Fuel Level	I															26
Throttle Operation			I	I	I	I	I	I	I	I	I	I	I			67
Air Cleaner *2						R										45
Crankcase Breather *3			C	C	C	C	C	C	C	C	C	C	C			68
Spark Plug			I	R	I	I	R	I	I	R	I	I	R			49
Valve Clearance				I	I	I	I	I	I	I	I	I	I			-
Engine Oil	I		R	R	R	R	R	R	R	R	R	R	R			51
Engine Oil Strainer Screen																-
Engine Oil Centrifugal Filter																-
Engine Idle Speed			I	I	I	I	I	I	I	I	I	I	I			-

## Maintenance Level

: Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

Procedures are provided in an official Honda Shop Manual.

: Technical. In the interest of safety, have your motorcycle serviced by your dealer.

## Maintenance Legend

**I** : Inspect (clean, adjust, lubricate, or replace, if necessary)

**R** : Replace

**C** : Clean

**L** : Lubricate