

Battery

Removal

Make sure the ignition switch is in the OFF position.

1. Remove the centre cover by removing the screw A.
2. Disconnect the negative \ominus terminal from the battery.
3. Remove the battery cover by removing the screws B.

