


3. Place your motorcycle on its centre stand on a firm, level surface.
4. Place a drain pan under the drain bolt.
5. Remove the oil fill cap/dipstick, drain bolt, and sealing washer to drain the oil.
 - Discard the oil at an approved recycling centre.

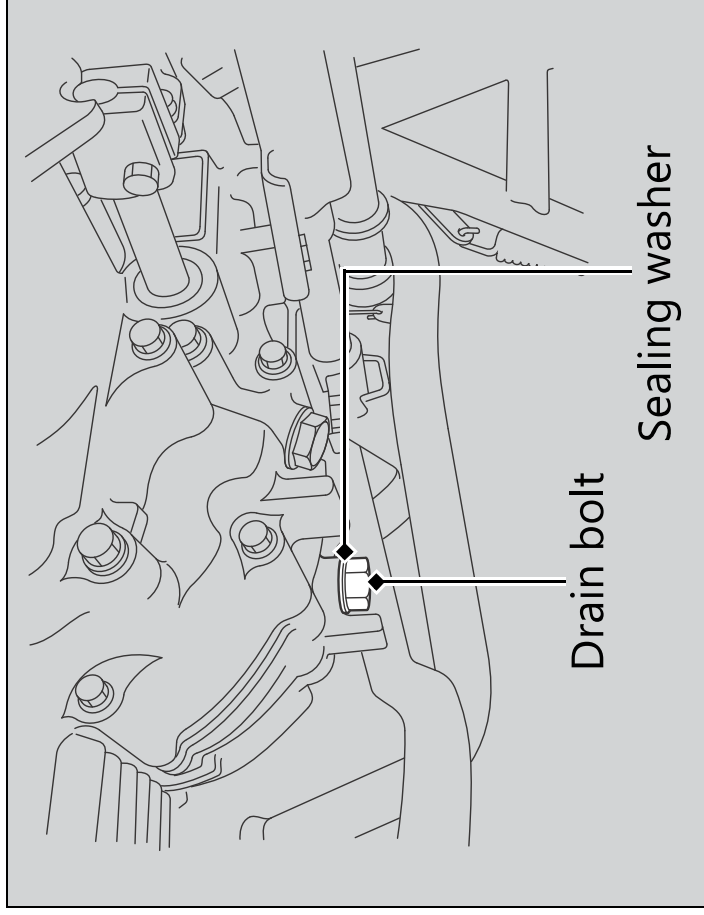

6. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 24 N·m (2.4 kgf·m, 18 lbf·ft)

7. Fill the crankcase with the recommended oil (► P. 39, 103) and install the oil fill cap/dipstick.

Required oil

When changing oil:

0.8 litres (0.8 US qt, 0.7 Imp qt)

8. Check the oil level. ► P. 51
9. Check that there are no oil leaks.