


■ Rear Turn Signal Bulb

The right and left turn signal bulbs replacement can be done in the same way.

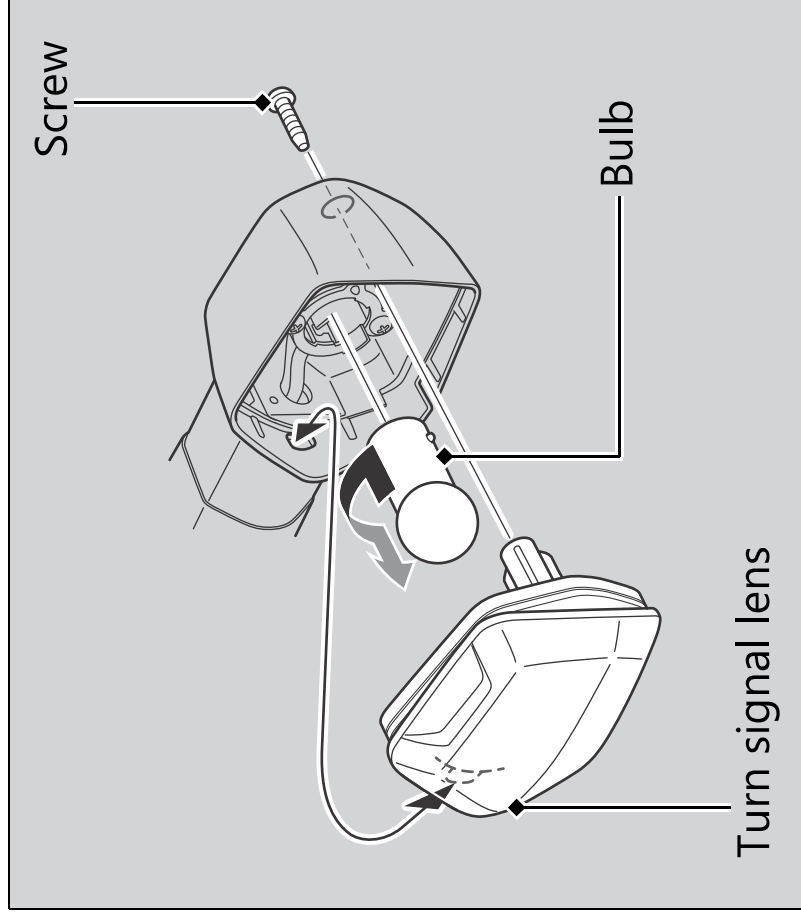

1. Remove the screw.
 2. Remove the turn signal lens.
 3. Slightly press the bulb and turn it counterclockwise.
 4. Install a new bulb and reinstall the parts in the reverse order of removal.
- Use only the amber bulb.