 


Instruments *(Continued)*

3 Changing of speed and mileage unit:

- a After clock setting, the speed and mileage unit start flashing.
- b Press the B button to select either "mph" and "mile" or "km/h" and "km".



When selecting the "mph" and "mile".

- Fuel mileage meter unit shows "mile/gal".
- Fuel consumption meter unit shows "gal" or "L".

When selecting the "km/h" and "km".

- Fuel mileage meter unit shows "L/100km" or "km/L".
- Fuel consumption meter unit shows "gal" or "L".

- b **When selecting the "mph" and "mile".**

Press the A button. The speed and mileage unit is set, and then the display moves to the changing of the fuel consumption meter unit.

- b **When selecting the "km/h" and "km".**

Press the A button. The speed and mileage unit is set, and then the display moves to the changing of the fuel mileage meter unit.