

4 Changing of fuel mileage meter unit:

- !a After changing of the speed and mileage unit, the fuel mileage meter unit start flashing.
- !b Press the B button to select either "L/100km" or "km/L".



- !c Press the A button. The fuel mileage meter unit is set, and then the display moves to the changing of the fuel consumption meter unit.

5 Changing of fuel consumption meter unit:

- !a After changing of the fuel mileage meter unit, the fuel consumption meter unit start flashing.
- !b Press the B button to select either "gal" or "L".



- !c Press the A button. The fuel consumption meter unit is set, and then the display returns to the backlight brightness adjustment.