

**Ignition Switch**

Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

**Steering Lock:** ( P35)

**AT/MT switch**

To shift between the AT MODE and MT MODE. ( P46)

**Engine stop switch**

Should normally remain in the (Run) position.

- ▶ In an emergency, switch to the (Off) position (the starter motor will not operate) to stop the engine.

 **Horn button**

**N-D switch**

To shift between Neutral and AT MODE. ( P46)

 **Start button**