Shifting Gears (Continued)

Changing between Neutral and AT/MT

Changing from Neutral (N) to AT MODE

Press the D/S side of the N-D switch (a). The D mode indicator comes on, "1" is shown in the gear position indicator and first gear is selected.

Changing from AT or MT MODE to Neutral

Press N on the N-D switch (b).

Changing between D mode and S mode while in AT MODE

Press the D/S side of the N-D switch. The S or D mode indicator comes on (c ,d).

Changing between AT MODE and MT MODE

Press the AT/MT switch (e). The S or D indicator goes out while MT MODE is selected (f).

