


## Maintenance Lid

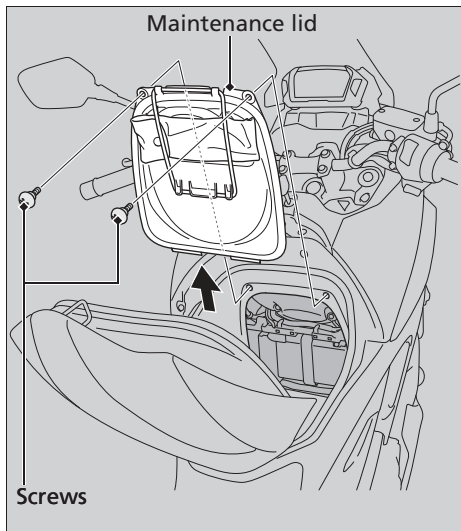

The maintenance lid must be removed to remove the battery, to service the main and fuse box fuses.

### Removal

1. Open the luggage box. [P. 50](#)
2. Remove the screws.
3. Remove the maintenance lid.

### Installation

1. Install the maintenance lid.
2. Install and tighten the screws.

**Torque:** 2.2 lbf·ft (3 N·m, 0.3 kgf·m).

3. Close the luggage box.