


Lower Fairing

NC700X

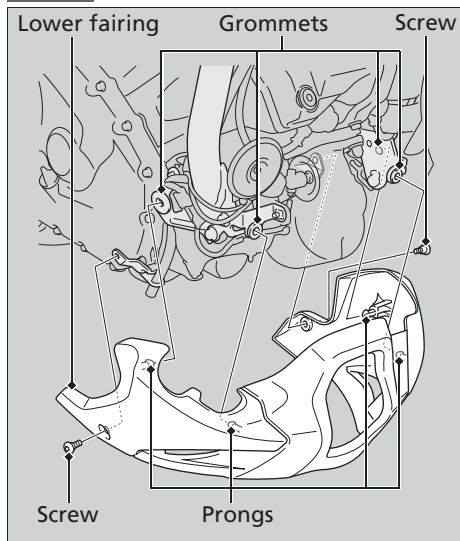

The lower fairing must be removed to service the coolant reserve tank and spark plugs, to replace the engine oil filter.

Removal

1. Remove the screws.
2. Remove the lower fairing, then remove the prongs from the grommets.

Installation

Install the parts in the reverse order of removal.