


### Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence [P. 38, 39](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

Check the following items:

- Make sure the engine stop switch is in the  (Run) position [P. 34, 37](#)
- Make sure the side stand is raised
- Check for a blown fuse [P. 127](#)
- Check for a loose battery connection or battery terminal corrosion [P. 78](#)
- Check the condition of the battery [P. 123](#)

If the problem continues, have your motorcycle inspected by your dealer.