


6. Slightly press the bulb and turn it counterclockwise.

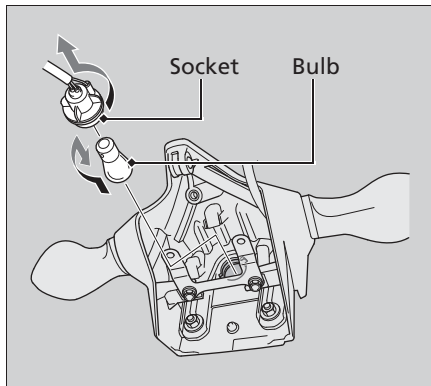


7. Install a new bulb and parts in the reverse order of removal.  
8. Install and tighten the screw C.

**Torque:** 4.4 lbf·ft (6 N·m, 0.6 kgf·m).

## Front/Rear Turn Signal Bulb

1. Remove the screw.
2. Remove the turn signal lens.
3. Slightly press the bulb and turn it counterclockwise.

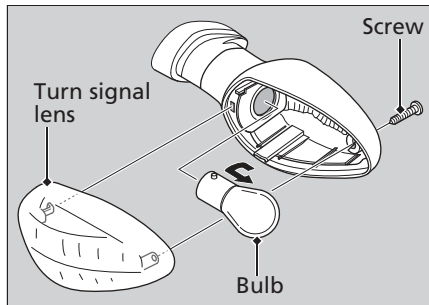

4. Install a new bulb and parts in the reverse order of removal.