

## Instruments (Continued)

### ON/OFF Setting Mode

#### 1 ECO mode setting:

You can set on or off of the ECO mode.

- ① Select the ON/OFF setting mode. **➡P.36**
- ② Press the SEL button to select "On" or "OFF".



- ③ Press the SET button. The ECO mode is set, and the display moves to the shift up mode setting.
  - ▶ When the tachometer segment color is set to GREEN or AQUA and the ECO mode is set to on, the user setting color will automatically change to WHITE.

#### 2 Shift up mode setting:

You can set on or off of the shift up mode.

- ① Press the SEL button to select "On" or "OFF".



- ② Press the SET button. The shift up mode is set.
  - ▶ When the tachometer segment color is set to AMBER and the shift up mode is set to on, the user setting color will automatically change to WHITE.
  - ▶ When the shift up mode is set to on, the display moves to the shift up point adjustment.
  - ▶ When the shift up mode is set to off, the display moves to the activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode.