

# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

⇒ **Right turn signal indicator**

⇐ **Left turn signal indicator**

**(ABS) ABS (Anti-lock Brake System) indicator**

**NC750XA/XD**

Comes on when the ignition switch is turned to the ON position.

Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:** ➔ **P.133**

**High beam indicator**

**Low oil pressure indicator**

Comes on when the ignition switch is turned to the ON position.

Goes off when the engine starts.

**If it comes on while engine is running:**

➔ **P.132**

**Neutral indicator**

Comes on when the transmission is in Neutral.

**High coolant temperature indicator**

Comes on when the ignition switch is turned to the ON position.

**If it comes on while riding:** ➔ **P.131**

