

## Ignition Switch

Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.


**Steering Lock:** ➡ P.54


## AT/MT switch

To shift between the AT MODE and MT MODE.

➡ P.66

## Engine stop switch

Should normally remain in the  (Run) position.

- ▶ In an emergency, switch to the  (Stop) position (the starter motor will not operate) to stop the engine.

## Start button

## N-D switch

To shift between Neutral and AT MODE. ➡ P.66

