

Troubleshooting

Engine Will Not Start	P. 130
Overheating (High coolant temperature indicator is on)	P. 131
Warning Indicators On or Flashing	P. 132
Low Oil Pressure Indicator	P. 132
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 132
ABS (Anti-lock Brake System) Indicator	P. 133
Torque Control Indicator.....	P. 134
If the “-” Indicator is Blinking in the Gear Position Window While Riding	P. 135
Other Warning Indications	P. 136
Fuel Gauge Failure Indication.....	P. 136
Tire Puncture	P. 137

Electrical Trouble	P. 145
Battery Goes Dead.....	P. 145
Burned-out Light Bulb	P. 145
Blown Fuse.....	P. 148