


## Main Fuse

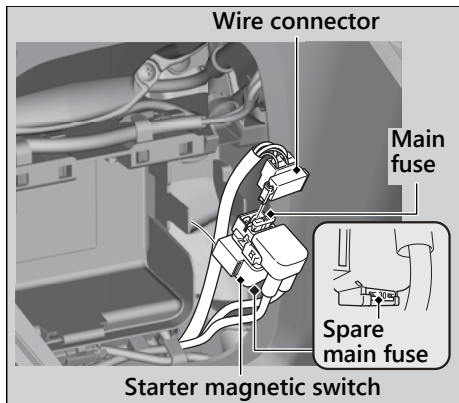

1. Open the luggage box. ► P. 71
2. Remove the maintenance lid. ► P. 101
3. Remove the battery. ► P. 97

4. Disconnect the wire connector of the starter magnetic switch.
5. Pull the main fuse out and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.  
► Spare main fuse is provided in the starter magnetic switch.
6. Reinstall parts in the reverse order of removal.

### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.