


## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 53

### Fuse Box Fuses

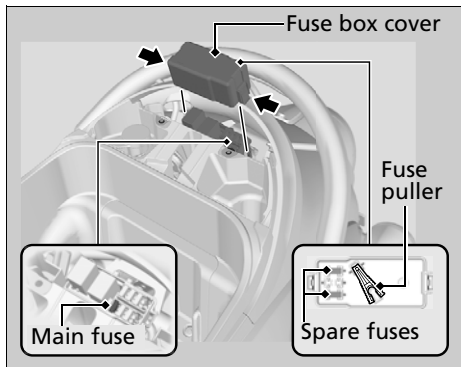

1. Remove the fuse box maintenance cover.  
► P. 65
2. Pull out the fuse box cover.
3. Pull the main fuse and other fuses out with the fuse puller furnished in reverse side of the fuse box cover one by one and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.  
► Spare fuses are provided on reverse side of the fuse box cover.
4. Reinstall the fuse box cover.
5. Install the fuse box maintenance cover.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your scooter inspected by your dealer.