

Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.


NOTICE

- (Using the start button)
If the engine does not start within 5 seconds, turn the ignition switch to the OFF position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- The engine will not start if the throttle is fully open.

Consult your dealer for advice if you plan to ride your scooter at an altitude above 2,500 m (8,000 feet).

NOTICE

If the scooter is transported to a place 2,000 m (6,500 feet) higher or lower than the start point, you may not be able to achieve sufficient engine performance at the new altitude. Consult your dealer before transporting your scooter.

- 1 Place the scooter on its center stand.
- 2 Lock the rear brake. **→P.30**
▶ The starter motor will only work when the brake lever is pulled in.
- 3 Make sure the engine stop switch is in the  (Run) position.
- 4 Turn the ignition switch to the ON position.

