

# Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

An optional larger tool kit may be available.  
Check with your Honda dealer's parts department.

|   |       |                                   |       |
|---|-------|-----------------------------------|-------|
| <b>Importance of Maintenance</b> .....              | P. 44 | <b>Throttle</b> .....             | P. 81 |
| <b>Maintenance Schedule</b> .....                   | P. 46 | <b>Crankcase Breather</b> .....   | P. 82 |
| <b>Maintenance Fundamentals</b> .....               | P. 49 | <b>Other Adjustments</b> .....    | P. 83 |
| <b>Removing &amp; Installing Body Components</b> .. | P. 62 | Adjusting the Headlight Aim ..... | P. 83 |
| Battery .....                                       | P. 62 |                                   |       |
| Battery Lid .....                                   | P. 63 |                                   |       |
| Center Cover .....                                  | P. 64 |                                   |       |
| Clip .....  | P. 65 |                                   |       |
| Maintenance Cover .....                             | P. 66 |                                   |       |
| <b>Spark Plug</b> .....                             | P. 67 |                                   |       |
| <b>Engine Oil</b> .....                             | P. 69 |                                   |       |
| <b>Air Cleaner</b> .....                            | P. 73 |                                   |       |
| <b>Coolant</b> .....                                | P. 74 |                                   |       |
| <b>Brakes</b> .....                                 | P. 76 |                                   |       |