



- 10.** Install the oil strainer screen, spring and oil plug and tighten.

Torque: 15 lbf-ft (20 N·m, 2.0 kgf·m)

- 11.** Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 18 lbf-ft (24 N·m, 2.4 kgf·m)

- 12.** Fill the crankcase with the recommended oil (► P. 58, ► P. 122) and install the oil fill cap/dipstick.

Required oil

When changing oil & cleaning the strainer screen:

0.69 US qt (0.65 L)

When changing oil only:

0.69 US qt (0.65 L)

- 13.** Check the oil level. ► P. 72
14. Check that there are no oil leaks.