

# Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).												
		Initial maintenance	Regular maintenance interval									
ITEMS	FREQUENCY	x100 mi	1	6	12	18	24	30	36	Note	Refer to page	
	(Whichever comes first)	x100 km	1.5	10	20	30	40	50	60			
		Hours	20	100	200	300	400	500	600			
	Check engine oil and coolant		Check oil and coolant at fuel stop								139, 157	
	Check tires		Check inflation and condition once a month								188	
	Check side net and snap hooks		●	●	●	●	●	●	●		47	
	Check brake fluid		Check fluid level once a month								182	
	Replace engine oil and oil filter		●		●		●		●		141	
	Check sub-transmission oil		●		●		●		●		148	
	Replace sub-transmission oil			Every 2 years (regardless of mileage)								150
	Replace DCT oil filter		●				●				145	
*	Inspect valve clearance		●			●			●	1	—	
*	Clean spark arrester			●	●	●	●	●	●		174	
	Replace air cleaner element								●	2	161	
	Clean sub air cleaner element				●				●	2	163	
	Check spark plugs				●		●		●		171	
*	Inspect idle speed		●			●			●		—	
*	Check fuel lines and connections					●			●		—	
	Check front and rear brakes		●			●			●	3	181	
	Check front and rear final gear oil		●			●			●		152, 154	

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 262).

Note 1 Inspect valve clearance as needed, if engine is noisy.

Note 2 Service more frequently when operating in dusty areas, sand or snow.

Note 3 Service more frequently when operated in muddy conditions.