

# Front Seat Removal


---

Refer to *Safety Precautions* on page 111.

The front seat must be removed, to check the sub-transmission oil, to add the sub-transmission oil and for throttle cable adjustment.

## Removal

1. Open the doors (page 45).
2. Pull the seat lock lever at the front center of the seat.
3. Pull the front of the front seat upward then slide it slightly forward.

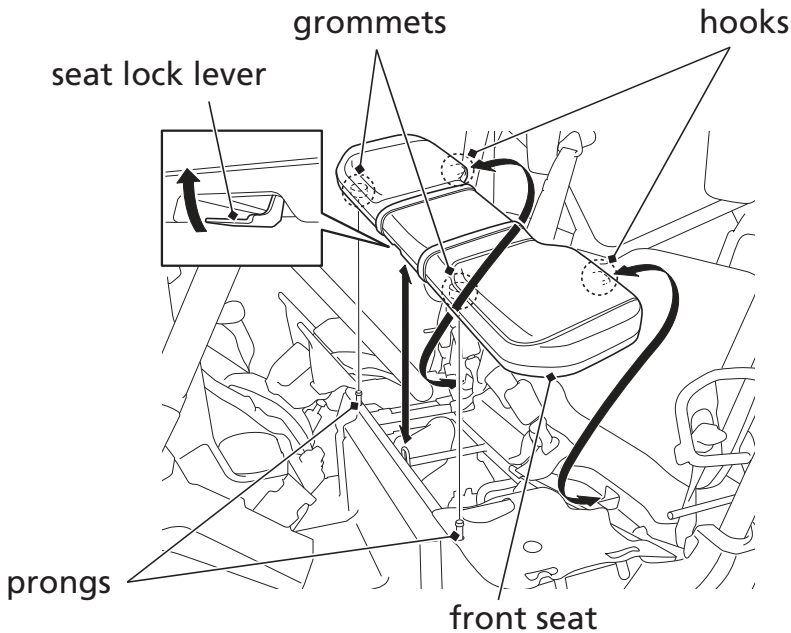

## Installation

1. Insert the hooks into the frame and the prongs into the grommets of the front seat.
2. Press down on the front seat until it locks.