


# Lubrication

Lubricate the shift select lever pivots as shown in the following illustration.

Remove the front hood (page 125).

**UNDER FRONT HOOD**

**shift select lever pivots**

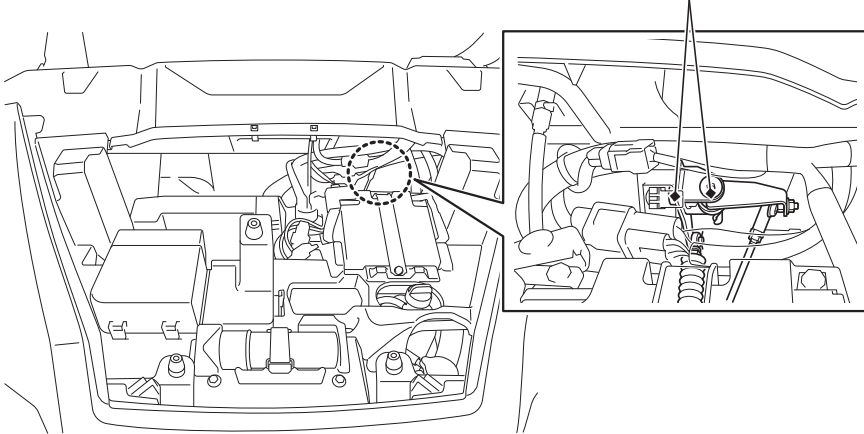

Lubricate the drive mode select lever pivots as shown in the following illustration.

Remove the front hood (page 125).

**UNDER FRONT HOOD**

**drive mode select  
lever pivots**

**drive mode select lever  
pivots**

