


Driver Controls

AT/MT Switch (except for SXS1000M3)

The AT/MT switch is located on the right side of the shift select lever. When the shift select lever is in the high range (H) or low range (L) position, you can switch between AT mode and MT mode by pressing the AT/MT switch.

(SXS1000M3P/M5P/M5D)

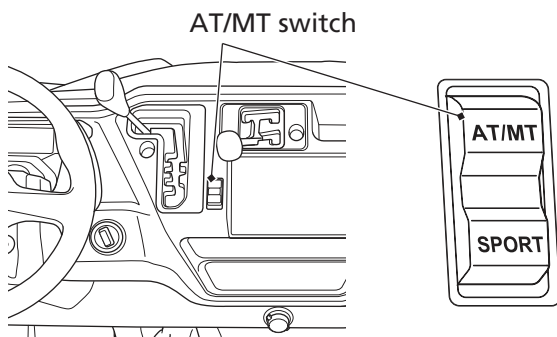

(SXS1000M3L/M5L)

