

# Basic Operation


---

Driving by operating the shift paddles while MT mode is selected (except for SXS1000M3)


To upshift the transmission, pull the right side upshift paddle once. To downshift the transmission, pull the left side downshift paddle once.

## GEAR SHIFTING SEQUENCE

downshift paddle (-)

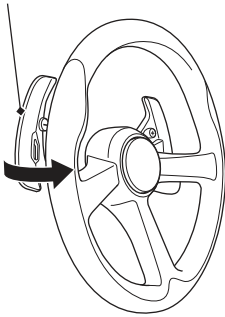

upshift paddle (+)

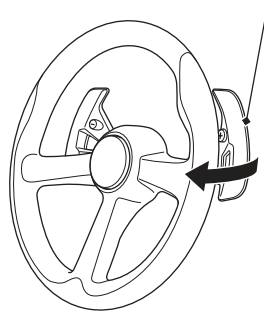

After starting the engine and letting it warm up, follow this procedure:

1. Press the brake pedal.
2. With the throttle closed, select the shift select lever into high-range (H) or low-range (L) position, and then select MT mode by pressing the AT/MT switch.
3. Release pressure from the brake pedal and increase engine speed by gradually pressing the accelerator pedal.
4. When speed increases, shift to 2nd gear by pulling the upshift paddle once.
5. Repeat this sequence to progressively upshift to 3rd, 4th, 5th and 6th (top) gear.
6. To downshift, pull the downshift paddle once.