

Servicing Your Honda

Air Cleaner Outer Cover Removal	140
Rear Mudguard Lid Removal	141
Clip Removal	142
Jack Up Point & Support Point	144

Service Procedures

Fluids, Filters & Lubricants

Fuel	145
Engine Oil & Filters	148
Front Final Gear Oil	165
Rear Final Gear Oil	167
Coolant	169
Air Cleaner	173
Lubrication	177

Engine

Accelerator Pedal	182
Spark Plugs	184
Spark Arrester	187
Exhaust System	189

Chassis

Suspension	190
Frame	195
Brakes	196
Tires	202
Wheels	210
Driveshaft Boots	211

Electrical

Battery	212
---------------	-----

Appearance Care	217
-----------------------	-----