


# Lubrication

Lubricate the door latch as shown in the following illustration. Open the door (page 54).

(SXS700M5P/M5D/M5L only)

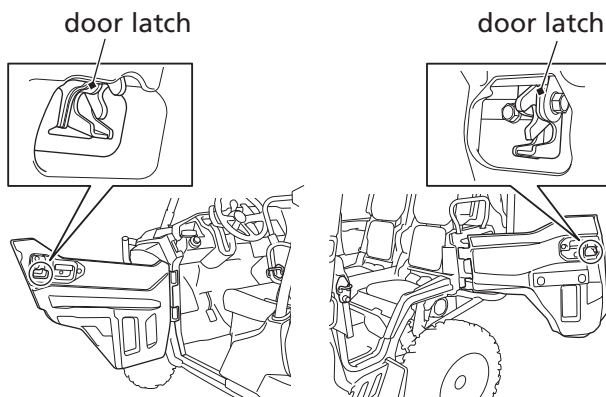

Lubricate the rear seat latch as shown in the following illustration.

(SXS1000M5P/M5D/M5L only)

