

Brake Pad Wear

Refer to *Safety Precautions* on page 123.

Brake pad wear will depend upon the severity of usage and driving conditions. The pads will wear faster in wet or muddy conditions. Inspect the pads during all regular service intervals to determine the pad wear.

Note that the pads are designed to make a metallic noise during braking when they reach the wear limit.

If you hear a continuous metallic friction sound when applying the brakes, the brake pads need to be replaced. Have the vehicle checked by a dealer.