

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).												
			Initial maintenance	Regular maintenance interval								
ITEMS	FREQUENCY	x100 mi	1	6	12	18	24	30	36	Note	Refer to page	
	(Whichever comes first)	x100 km	1.5	10	20	30	40	50	60			
	Hours		20	100	200	300	400	500	600			
Check engine oil and coolant			Check oil and coolant at fuel stop								151, 170	
Check tires			Check inflation and condition once a month								203	
Check side net and snap hooks			t	t	t	t	t	t	t		56	
Check brake fluid			Check fluid level once a month								197	
Replace engine oil and oil filter			t	t	t	t	t	t	t		153	
Check sub-transmission oil			t	t	t	t	t	t	t		161	
Replace sub-transmission oil				Every 2 years (regardless of mileage)								163
Replace DCT oil filter			t			t					158	
* Inspect valve clearance			t			t			t	1	—	
* Clean spark arrester				t	t	t	t	t	t		187	
Replace air cleaner element									t	2	174	
Clean sub air cleaner element						t			t	2	176	
Check spark plugs				t		t			t		184	
* Inspect idle speed			t			t			t		—	
* Check fuel lines and connections						t			t		—	
Check front and rear brakes			t			t			t	3	196	
Check front and rear final gear oil			t			t			t		165, 167	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 282).

Note 1 Inspect valve clearance as needed, if engine is noisy.

Note 2 Service more frequently when operating in dusty areas, sand or snow.

Note 3 Service more frequently when operated in muddy conditions.