

# Front Hood

---

Refer to *Safety Precautions* on page 123.

The front hood must be removed to access the tool kit, to add coolant, to clean the sub air cleaner, to lubricate the shift select lever pivots and drive mode select lever pivots, battery maintenance and to replace a fuse.

## Removal

1. Turn the knobs 1/4 clockwise or 1/4 counterclockwise.
2. Remove the front hood.

## Installation

1. Insert the hooks into the slots.
2. Turn the knobs 1/4 counterclockwise or 1/4 clockwise.

