


Engine Oil & Filters

5. Place an oil drain pan under the crankcase.
6. Remove the engine oil drain bolts and sealing washers.

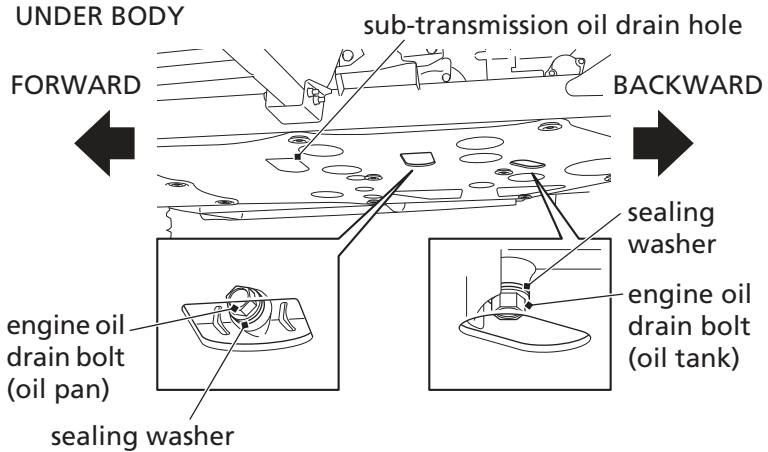

NOTICE

Be sure not to drain sub-transmission oil unless intending to do so. The engine and sub-transmission oils are not the connected.

(cont'd)